

# ANIMATION MAESTRO 1 PIR & AUDIO INSTRUCTIONS



Aux Control Connector

PIR Connector

## Aux Control: (Sound Module)

To set or change start time:

After the controller has been programmed, trigger the controller.

While program is running press and release the "Record" button when the sound should start. The next time the program is run (triggered) the sound will start at the programmed time.

## Trigger Type:

To change the trigger from normally open to normally closed or back from normally closed to normally open:

Press and hold both the "Record" and "Activate" buttons while plugging in the power supply, release both buttons. The trigger type will now be opposite of what it was. Changing trigger type will not clear the current program.

If there is a current program and the trigger type is changed to normally closed and the trigger is not closed then the program will start running and continue to run until the trigger is closed.